


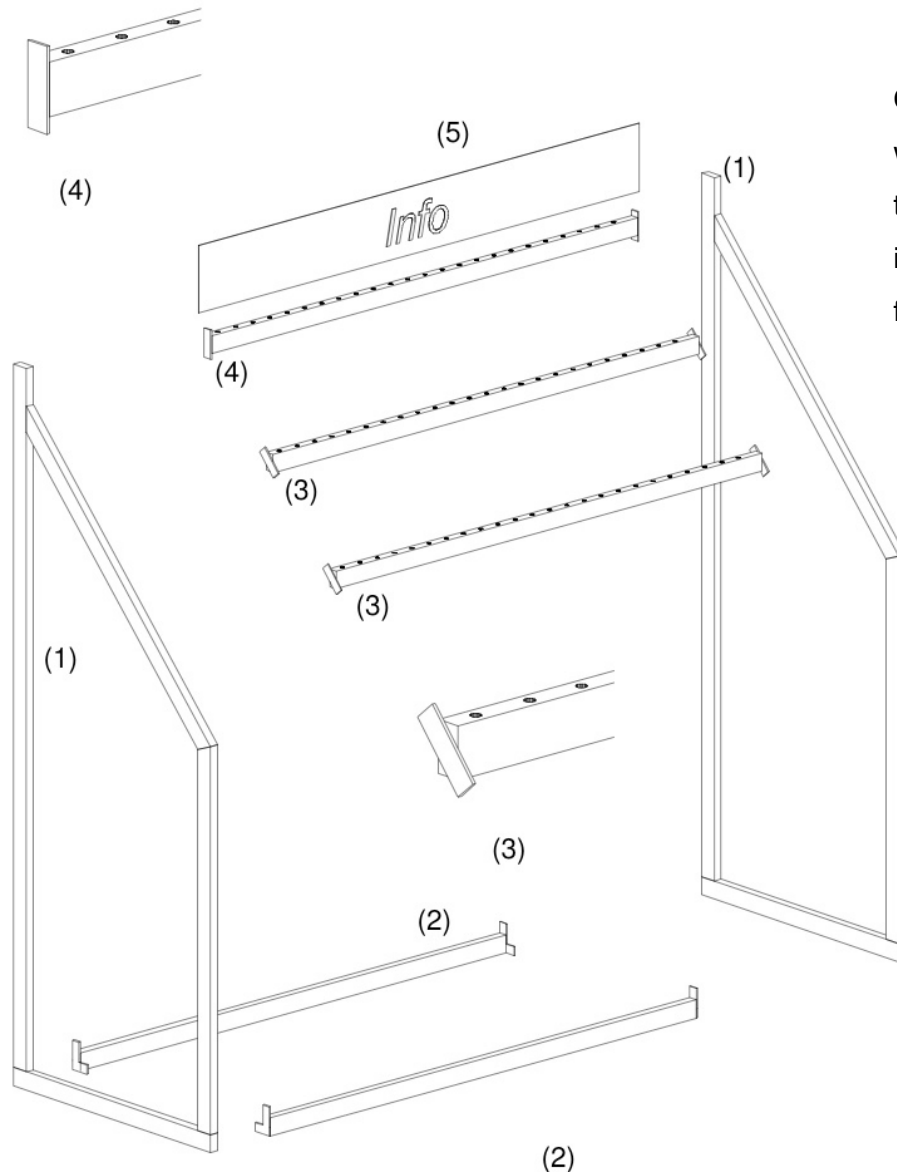

Connect the left and right frame (1) with the connector bars at the bottom (2) with screws by using the predrilled holes. Connect the perforated bars (3) with the left and right frame (1) with screws by using the predrilled holes. Insert the info panel (5) into the frame (1) and fix the upper perforated bar (4) with the frame (1) with screws by using the predrilled holes.

List of parts:

- Pos. (1): 1 left and 1 right frame
- Pos. (2): 2 connector bars
- Pos. (3): 2 perforated bars
- Pos. (4): 1 perforated upper bar
- Pos. (5): 1 info panel

incl. screws (20 pieces)

Projekt: ZMV **2, 3 und 6**

ZMV-Trio

Assembly Instruction with list of parts

Blatt 1